

Yanks Mannequins LLC assembly instructions



1. Lay left and right legs flat on non-abrasive surface. If you have high boots, see instructions in lower right corner




2. Insert right leg into pants and put on right boot.



3. Insert left leg into pants and put on left boot.



4. Insert right leg into hip and rotate to lock in place

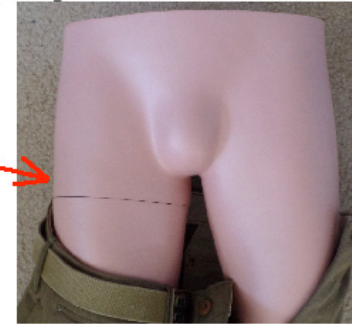

5. Bring legs in upright position



6. Screw in cone



7. Insert torso on top of cone and rotate to lock



8. Insert right arm into right shirt sleeve



9. Hook right arm (with shirt) to right side torso




10. Insert left arm into left shirt sleeve and hook left arm to left side torso



11. Button shirt and secure pants.



12. Screw in left and right hands

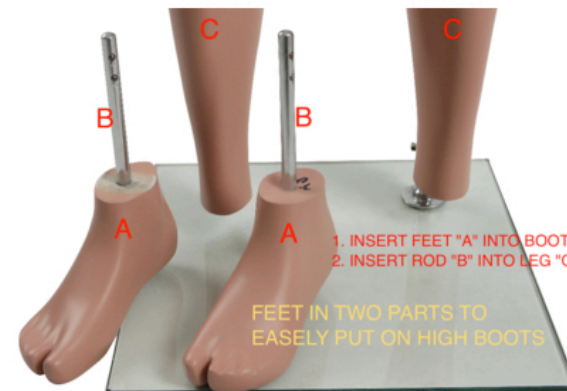

Note: rod "B" can be unscrewed from foot "A"